


IDENTIFYING THE PARTS

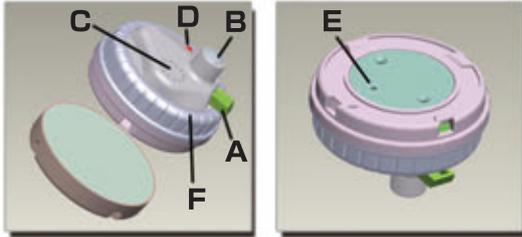

- A.** Lock Plunger
- B.** Magnetic Clutch
- C.** Buzzer
- D.** Red LED Indicator
- E.** Reset Key
- F.** Control Panel

PRECHECK THIS DEVICE

- Prior to the shipment:
 - A. The Battery Power is set as ON in the factory;
 - B. The Locker is set as OPEN in the factory;
 - C. The Control Panel could be turned either clockwise or anticlockwise;
- To precheck the tampered-with alarm, use a pin to click the Reset Key. The Audio Indicator will alarm, and the Visual Indicator will flash, until the click on the Reset Key is released.



BATTERY INFORMATION

- The unit uses Lithium button type batter CR2032.
- The unit's battery power is set in an OFF status before the shipment in the factory. To stick a pin shaft into the reset hole for about 3 seconds to activate the unit and you could also stick the reset hole for about 10 seconds to shut it off.
- The unit is reusable. Please change the battery, when the battery runs out.
- The red LED indicator flashes every 6 seconds, when the battery power is sufficient; the red LED indicator flashes every 1 second, when the battery power is low.
- The Speaker emits an audio indication as 'DEE' every 1 minute, when the batter power is low.
- The battery power supports over 30 minutes continuous alarm, when the unit is being applied freshly.

VISUAL INDICATION

- The red LED indicator flashes every 6 seconds, when the battery power is sufficient; the LED indicator flashes every 1 second, when the battery power is low.
- The red LED indicator flashes continuously, when the unit is tampered with(the cable is cut).

AUDIO INDICATION

- The speaker alarms at about amplified 100dba, when the unit is tampered with (the cable is cut).

LOCK / UNLOCK

When apply this unit, press the red Locker as the direction showed, until it is clicked. Turn the Control Panel clockwise, until this unit is securely fastened.



A strong magnetic detacher is required. Apply the strong magnetic detacher onto the Magnetic Clutch and make them contacted. The red Locker will be released afterwards. Turn the Control Panel anticlockwise to release the cable to unfasten the merchandise.



ACTIVATE / DEACTIVATE

- The Alarm function when tampered with, is activated prior to shipment in the factory.
- To deactivate the alarm, please use a pin to click the Reset Key, till the audio indication is stopped.